

Installation Instructions

SpeedBox Tracker
for Bafang

STEP 1




4 pin
SpeedSensor




3 pin
SpeedSensor

A STEP 2

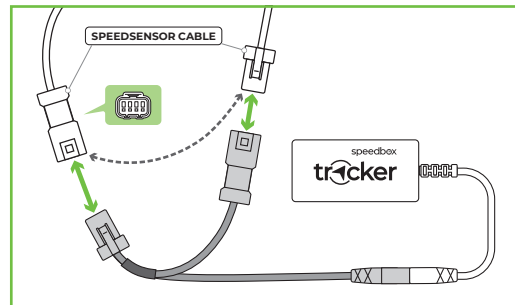


B STEP 2

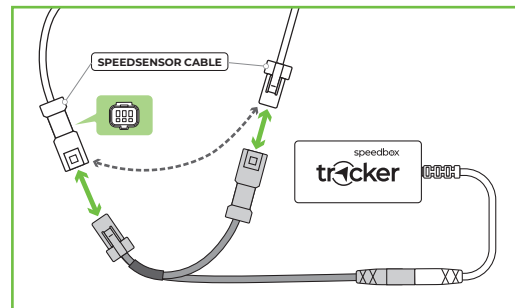

How to connect SpeedBox Tracker along with SpeedBox Tuning

Existing SpeedBox Tuning installation

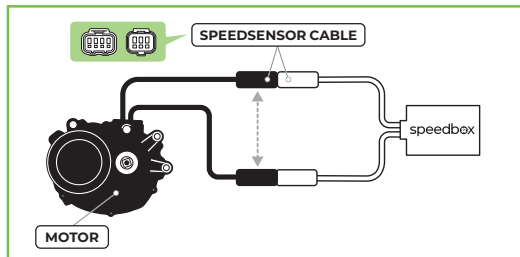

Installation of SpeedBox Tuning along with SpeedBox Tracker

